

Nitrate by NADH Disappearance: Lab Kit for Food Testing

(0 to 70 ppm Nitrate-N)

Accurate, economical, and safe nitrate analysis.

- Analyze 100 samples
- Nitrate Standards included with the kit

Nitrate Units	US EPA	CA & Europe	Molarity
Standard Range Kit	0.7 - 70.0 ppm Nitrate-N	3.1 - 308 ppm Nitrate	0.05 – 4.98 mM Nitrate

Nitrate is reported in different units depending on your field of use and where you live.

OVERVIEW

- ✓ Store kit refrigerated or below 60°F (15°C).
- ✓ See box for expiration date.

This kit will provide reliable estimates of nitrate content when used as supplied.

For **quantitative data**, measure reagents using pipets and read assay results with a spectrophotometer at 340nm.

♦ EQUIPMENT AND REAGENTS

You will need to supply:

- distilled or deionized water
- clean, nitrate-free containers if you are collecting samples to analyze later

We use the abbreviation "d-I water" for distilled or deionized water.

Superior Enzymes 334 Hecla Street

Lake Linden, Michigan 49945

Tech: 906.296.1130 Sales: 906.296.1115 This Nitrate test kit is based on the enzyme Nitrate Reductase (NaR), catalyzing the reduction of Nitrate to Nitrite using the natural electron donor NADH. The concentration of Nitrate in the original sample is determined by measuring absorbance versus Nitrate concentration in Nitrate Standards. Nitrate can be determined in water samples and extracts of plant tissues, soils and foods. The test is designed to measure Nitrate in the range of 0.7 to 70 ppm Nitrate-N in up to 100 samples or standards. The Nitrate concentration can also be expressed as mM Nitrate, where range is 0.05 to 4.98 µM Nitrate, or ppm Nitrate, where range is 3.1 to 308 ppm Nitrate.

Prepare your food samples according to your standard procedures. Make sure your samples are ready to assay before starting the procedure on page 3.

Supplied in NECi Test Kit

- □ **Assay Buffer (AB)** in liquid form five 50 ml tubes
- □ NADH in freeze-dried form eight tubes in amber bag
- □ Nitrate Reductase (NaR) in freeze-dried form four tubes in foil pouch
- **Enzyme Diluent** four squeeze-bulbs
- □ Nitrate Standard (700 ppm Nitrate-N) in liquid form 3 mL in 5 ml tube
- ☐ Microcentrifuge tubes nine tubes for preparing Nitrate Standards
- □ Cuvettes 10 for reactions, UV compatible

Supplied by User

- □ 10 ml graduated cylinder.
- □ Variable pipetters (10 to 100 μ l and 100 to 1000 μ l).
- □ **Spectrophotometer** capable of reading at 340 nm± 20 nm, with a glass or plastic cuvette (approx. volume 3.5 ml).
- \Box **Timer** (0 to 20 minutes) a clock or stop watch is adequate.
- □ **Deionized or distilled water** (d-I water; must be "Nitrate-free" to avoid high background).
- Ice and Ice Bucket.
- ☐ Extra cuvettes may be needed. Make sure they are UV compatible (optical glass, plastic or quartz)

NEED HELP? Contact NECi Toll Free: 1-888-NITRATE FAX: 1-906-296-8003

Email: tech@nitrate.com
Visit us on the web: www.nitrate.com

◆ REAGENT **PREPARATION**

Step 1 Assay Buffer – ready to use from kit. Warm to room temperature for nitrate tests. If desired, the assay buffer may be more quickly warmed in a 30°C water bath.

Step 2 Remove a tube of NADH from amber bag, tap tube to settle contents, add 1.5 ml **d-I water** and replace cap. Mix by inversion several times. Keep on ice during use.

Step 3 Remove NaR vial from foil pouch and tap tube to settle contents before opening. Twist off the end of the Enzyme Diluent Squeeze Bulb and completely empty the contents into the NaR vial. Replace the cap and mix by inversion 3 times. Allow to stand at room temperature for at least 10 minutes, with mixing at 5 and 10 minutes. Then keep on ice during use.

NOTES ON THE REAGENTS

- **Assay Buffer** 28 mM KH₂PO₄, 0.025 mM EDTA; pH 7.5
- NADH 2.4 mg per tube.
- Nitrate Reductase (NaR) 1.0 unit of NaR per tube.
- Nitrate Standard 1 vial of 700 ppm nitrate-N.

◆ STANDARD **PREPARATION**

Transfer 1 ml of 700 ppm Nitrate-N Standard into a test tube containing 9 ml d-I water to make a 70 ppm Nitrate-N Standard. Use the 9 microtubes (provided in kit) to prepare Nitrate Standards as shown in table below. Cap and mix the tubes by inversion before use.

Vol 10 ppm		Resulting	Resulting	Resulting
Nitrate-N	Volume	Standard	Standard	Standard
Standard	d-I water	(ppm Nitrate-N)	(ppm Nitrate)	(mM)
1000	0	70	308	4.98
750	250	52.5	231	3.74
500	500	35	154	2.49
250	750	26.3	115.7	1.25
100	900	7	30.8	0.498
50	950	3.5	15.4	0.249
25	975	1.75	7.7	0.125
10	990	0.7	3.1	0.050

♦ NITRATE ASSAY PROCEDURE

- The following procedure is written for single determinations.
- For greater accuracy, replicates can be run.

WASTE DISPOSAL

Follow all local guidelines and regulations. If there are no local guidelines, wash the waste down the sink with large amounts of running water.

CALCULATIONS


- STEP 1 Pipette 50 µl d-I water into one cuvette for use as reagent blank.
- STEP 2 Pipette 50 μl of your prepared samples and standards into the required number of cuvettes.
- STEP 3 Add 0.9 ml Assay Buffer to each cuvette.
- STEP 4 Add 100 µl NADH solution to each cuvette. Cap and mix thoroughly.
- STEP 5 Zero the spectrophotometer with d-I water in a cuvette. Read absorbance of each cuvette at 340nm (A1).
- STEP 6 To start the reaction add 20 µl NaR solution to each tube. Recap and mix thoroughly.
- STEP 7 Read A340 of each cuvette at exactly 20 minutes (A2) after adding NaR.
- STEP 8 Read A340 of each cuvette at exactly 30 minutes (A3).

STEP 1 Determine absorbance differences (A1-A2) and (A2-A3 for the blank and samples. Absorbance difference of the blank = $(A1-A2)_{blank} - 2 \times (A2-A3)_{blank}$

Absorbance difference of the sample = $(A1-A2)_{sample} - 2 \times (A2-A3)_{sample}$ $\Delta A_{nitrate}$ = absorbance difference $_{sample}$ - absorbance difference $_{blank}$

STEP2 Generate a standard curve for the Nitrate Standard (see example below). Using linear graph paper or a computer plotting program such as Sigma Plot® or spreadsheet such as Excel®, plot the ppm Nitrate-N on the x-axis, and the ΔA -340 nm for each nitrate standard on the y-axis. If plotting by hand, draw a straight line through the points for the Nitrate Standards. If plotting by computer, the slope of the line can be calculated for determining Nitrate-N ppm in the unknown samples.

STEP 3 Using the standard curve, determine the ppm Nitrate-N for the sample: (a) Find the ΔA -340 nm for the sample on the y-axis of the standard curve. (b) Follow over along a horizontal line to where the line intersects the standard curve. Trace down the x-axis and read the ppm of Nitrate-N on the x-axis.

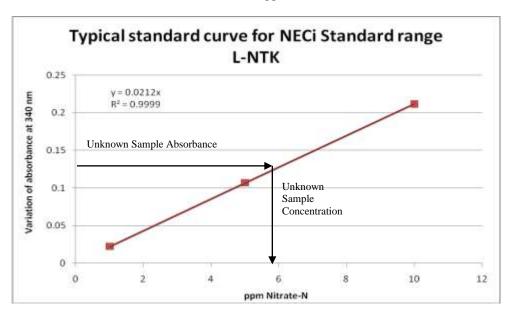

UNKNOWN SAMPLES WITH HIGH NITRATE

This NECi Nitrate Test Kit is capable of determining Nitrate levels of up to 70 ppm Nitrate-N (4.98 mM Nitrate). If an unknown sample is found to have more than 70 ppm Nitrate-N, the sample may be diluted with d-I water 1:10 to allow an exact determination. For example, take $100~\mu l$ of sample and add $900~\mu l$ of deionized water to make a 1:10 dilution and then assay $100~\mu l$ of the diluted sample. After finding the Nitrate content of the diluted sample, multiply the Nitrate concentration by 10~t to find the Nitrate concentration in the original sample . NOTE: Keep the sample volume constant by diluting the sample rather than using a smaller volume of sample in the assay.

DETERMINING NITRATE IN

MOLAR UNITS

Use a conversion of 1ppm Nitrate- $N=71~\mu M$ Nitrate. One ppm Nitrate-N=1~mg of Nitrogen/liter. Since Nitrogen has a molecular weight of 14 g/mole, then the molar concentration is:

 $(0.001 \text{ g/1}) \div (14 \text{ g/mole}) = 0.000071 \text{ M Nitrogen} = 0.000071 \text{ M Nitrate} = 71 \mu\text{M Nitrate}$

DETERMINING NITRATE AS A QUANTITY

(Using the 50 μ l Sample Size). In the tube where the 70 ppm nitrate-N standard is determined, there is approx. 0.497 μ mol of Nitrate [(9.94 μ mol Nitrate/ml) x (0.05 ml) = 0.497 μ mol]. So the example standard curve would have a slope of 0.0427 A-340 nm/ μ mol Nitrate (calculated from slope = 0.0212 A-340 nm/0.497 μ mol Nitrate).

FOODSAMPLE PREPARATION

Use your standard food sample preparation method prior to starting the nitrate assay procedure on page 3.

Thanks for using our products. Call Tech Support: 1.906.296.1130, or visit the NECi website: www.nitrate.com if you need more information. We're always interested in hearing about your experience with our kits.

NECi Superior Enzymes: Clean Water. Fertile Soil. Serious Science.

Copyright © 2019 NECi Superior Enzymes; All rights reserved.